

L-TEK P100

Portable Laser Methane Gas Detector

February 2025

M02025/EN/ISSUE 1



CONTENTS

PROLOGUE	4
Attention	4
Warning	4
Danger	4
1. PRODUCT DESCRIPTION	5
2. PRINCIPLE	5
3. SPECIFICATIONS	6
4. PACKING LIST	6
5. TRANSPORTATION AND STORAGE	7
6. PRODUCT COMPOSITION	7
6.1 Composition introduction	7
6.2 Product appearance	7
7. INTERFACE	8
8. OPERATION	8
8.1 Power on/off	8
8.2 Homepage	8
8.3 Menu	9
8.4 Alarm level setting	9
8.5 Buzzer Switch	10
8.6 Language selection	10
8.7 Factory default	11
8.8 Date & Time setting	11
8.9 Unit selection	11
8.10 Start detection	12
8.11 Detection instruction	12
8.12 Graph mode	12
8.13 View alarm data	12
8.14 Precautions for detection	13
8.15 Data query	13
9. CHARGE	15
10. MAINTENANCE	15
11. REPAIR	15
12. WARRANTY	15

PROLOGUE

ATTENTION

Please note that the equipment must comply with the operating rules and methods specified in the manual. Please note that there are strict regulations for the installation, maintenance, and repair of this equipment. Any illegal operation may cause danger during use.

Crowcon reserves the right to optimise and improve the product without any prior notice.

The right to modify the content of this operation manual belongs to Crowcon, and no one is allowed to make modifications, deletions, or other actions without written authorisation from Crowcon.

SAFETY

WARNING

- If the equipment is repaired or modified without authorisation, it will not be able to restore its initial state, and its intrinsic safety explosion-proof structure may be damaged. Continuing to use the equipment at this time may cause danger. Therefore, please contact the after-sales service of Crowcon before repairing or modifying the equipment.
- Unauthorised disassembly of equipment is prohibited. This is related to the explosion-proof level and safety of the equipment. If there is a malfunction, please contact the after-sales service of Crowcon in time.

DANGER


- Do not use this device in any unspecified explosive environment.
- The green laser of this product complies with the third level laser product standard, but please avoid direct observation or contact with human eyes!

ATEX/ IECEx SPECIFIC CONDITIONS OF USE:

- Do not open when an explosive atmosphere is present.
- The battery is not replaceable in hazardous areas.
- Do not charge the battery in hazardous locations.
- Maximum output voltage from charger shall not exceed 5.0V (Um).

1. PRODUCT DESCRIPTION


The L-TEK P100 uses TDLAS (Tunable Diode Laser Absorption Spectroscopy) technology to quantitatively measure the methane gas concentration in the target area by absorbing the specific wavelength laser with methane gas, and quickly measure the methane gas concentration in the area. The product has the characteristics of precise selectivity, high sensitivity, high precision, low false alarm rate, strong anti-interference, and easy operation for methane gas monitoring. The L-TEK P100 can be carried by inspection personnel, providing great convenience for safety inspection work, and flexibly and dynamically detecting methane concentration in the inspection area.

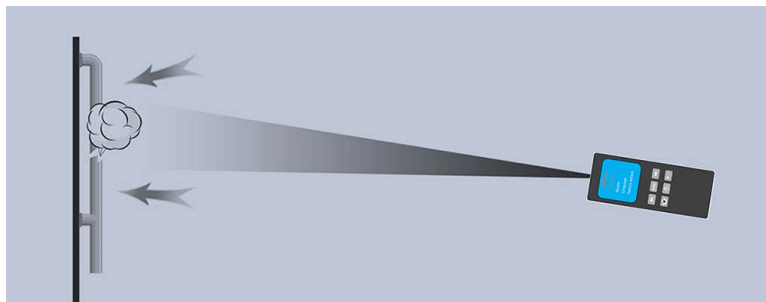

2. PRINCIPLE

Using tunable laser spectroscopy (TDLAS) technology, the portable laser methane gas detector L-TEK P100 uses the characteristic absorption principle of a specific wavelength laser when it irradiates a specific gas. With the calculation of CPU, we could get the value of ppm.m which is corresponding the concentration.

The device can accurately measure and analyse the characteristic gas without interference from other gas components. That is, the device can only perform test functions on methane, and does not react to other gases such as ethane, propane, water vapor and other gases.

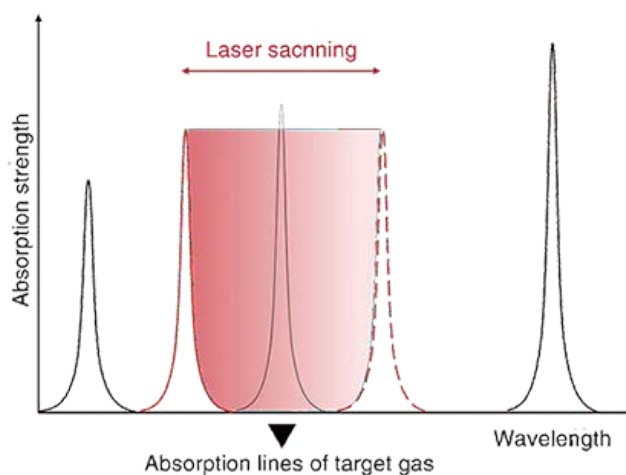

3. SPECIFICATIONS

Model	L-TEK P100	
Basic Parameters	Measuring range	0~99999ppm.m
	Response Time	≤0.1s (adjustable)
	Measurement distance	20m/50m
	Data storage	1000 items
	Display	OLED
	Dimensions	138mm x 49mm x 35mm
	Weight	320g
	Ingress protection	IP54
Certification	ATEX, IECEx	 II 2 G Ex ib op is IIB T4 Gb (-20 °C ≤Ta ≤+50 °C)  SGS23ATEX0156X  IECEx SGS23.0078X
Laser safety	Detecting laser	Class I
	Indicating laser	Class IIIR
Environment	Working temperature	-20°C~50°C
	Working Humidity	98%RH (No condensation)
Power	Power Voltage	3.5~5V
	Power consumption	<2W
	Battery life	6 hours
	Battery type	Lithium

4. PACKING LIST

Item	Quantity
Portable Laser methane	1
Carry case	1
Carry strap	1
Charger Cable (USB-C)	1
Manual	1

According to different product models, there may be changes in the accessories along with the box. Please refer to the actual situation. If you find any items damaged or missing, please contact Crowcon.

5. TRANSPORTATION AND STORAGE

Transportation:

Avoid severe impact and shock.

Storage:

When the instrument is not in use, it is recommended to store it in a warehouse with a temperature range of 0-35°C, relative humidity below 98%, and no corrosive gas environment.

6. PRODUCT COMPOSITION



6.1 COMPOSITION INTRODUCTION

Device: Portable Laser Methane.

Carry case: To provide protection for storage and transportation. Instruments should be placed in the portable box when not in use.

Carry strap: Tied to the device for easy to carry.

Charger: Type-C 5V DC, 1.0A

Manual: Operation instructions

6.2 PRODUCT APPEARANCE




Screen: OLED display screen, displaying measured values.

Lens: After the laser is emitted and reflected back by the background reflector, it needs to be focused through a lens and reach the detector.

Indicating laser: Green visual laser helps user locate measurement direction and position.

Detecting laser: The detection light source cannot be observed by the naked eye, please do not cover it when using it.

7. INTERFACE

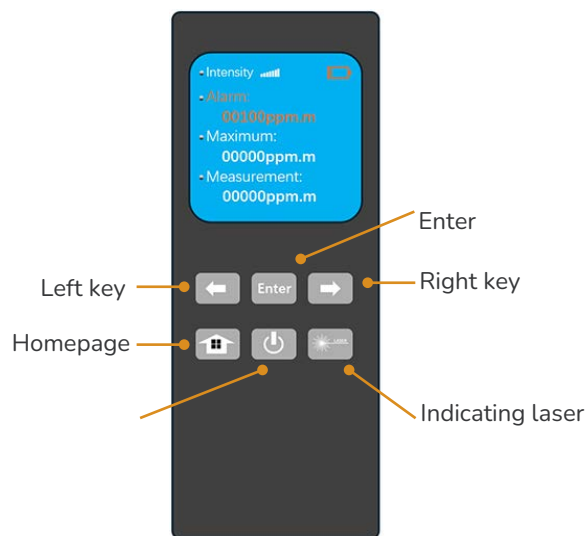

- Power:** In the shutdown state, long press (5s) to turn on the device; When turned on, long press (5s) to turn off.
- Homepage:** When the instrument is turned on, click to return to the homepage.
- Indicating laser:** When the instrument is turned on, the indicator laser is green, click the key to switch the indicator laser.
- Left key:** Cursor switching and menu option switching.
- Right key:** Cursor switching and menu option switching.
- Enter:** In the homepage state, click to enter the menu; In the menu state, click on the confirm option.

8. OPERATION

8.1 POWER ON/OFF

Press and hold the power key for 5 seconds to enter the initialization, the indicator laser green light flashes. Press and hold the power key for 5 seconds, the instrument will turn off.

8.2 HOMEPAGE

The home page displays the current measured integrated concentration and the maximum value of historical measured values. The upper left corner of the screen displays light intensity, indicating the strength of the laser reflected signal. The battery level is displayed in the upper right corner of the screen. You can return to the homepage by clicking the homepage key on any interface.



8.3 MENU

After clicking the Enter key on the homepage, enter the menu page, which includes alarm level setting, buzzer, language, and factory default. In menu page, move the cursor by using the ← and → keys to select the needed function.



8.4 ALARM LEVEL SETTING

Press Enter on the 'Alarm level' option. Double press the ← and → keys to move between the alarm level digits. Single press the ← and → keys to set the desired number.



Set the concentration value for the alarm, and the device will sound an alarm when the measured concentration value exceeds the concentration threshold.

8.5 BUZZER SWITCH

After clicking the Enter button on the homepage, enter the menu page. On the menu page, move the cursor using the $\leftarrow$ and $\rightarrow$ keys, move to the Buzzer function, and press using the $\leftarrow$ and $\rightarrow$ keys, and press the Enter key.



8.6 LANGUAGE SELECTION

After clicking the Enter key on the homepage, enter the menu page. On the menu page, move the cursor by using the $\leftarrow$ and $\rightarrow$ keys, move to the language mode setting, and press Enter to enter. Select Chinese or English and press Enter.



8.7 FACTORY DEFAULT

After clicking the Enter key on the homepage, enter the menu page. On the menu page, using the  and  keys to move the cursor to factory default and press the Enter key. Then select on or off and press the Enter key.



8.8 DATE & TIME SETTING

After clicking the Enter key on the homepage, enter the menu page. On the menu page, using the  and  keys to move the cursor to date and time and press the Enter key. Double press the  and  keys to move between the digits. Single press the  and  key keys to set the desired number.



8.9 UNIT SELECTION

After clicking the Enter key on the homepage, enter the menu page. On the menu page, using the  and  keys to move the cursor to unit selection and press the Enter key. Then select the desired unit and press Enter.



8.10 START DETECTION

When the instrument is turned on, point the indicating laser at the target being measured and the display will show the integrated concentration of methane in ppm.m in the area being measured.

i ppm.m is the unit used to describe gas concentration, which is the product of gas concentration and gas mass thickness. If the measured gas concentration is 400ppm and the gas mass thickness (distance of laser beam passing through the gas mass) is 0.5 meters, the reading is 200ppm.m.



8.11 DETECTION INSTRUCTION

1. The indicating laser is aimed above the target for detection, because methane gas is less dense than air and spreads upwards after leakage.
2. The indicating laser should be directed towards objects that are easily reflective, such as buildings, pipes, and floors, in order for the instrument to receive stronger reflected laser signals.
3. At the same time of detection, observe the light intensity indicator bar returned at the top of the display, and if it is very weak, you need to change the angle or position for detection.
4. When detecting, control the speed of aiming and scanning. Try to maintain a constant speed, otherwise the drastic or sudden action change will cause distortion or false alarm of the instrument measurement.

If there is a dead angle in the target area that is not easy to be irradiated by the laser, change the orientation or repeat the above steps for the adjacent area.

8.12 GRAPH MODE

From the home screen, key the  button and the display will display the live readings as a graph. The alarm set point is displayed as a flat red line. To return to the home screen, press the home button



8.13 VIEW ALARM DATA


From the home screen, key the  button and the display will display the historical alarm data. Historical alarm data can also be viewed or exported through the software. See Section 8.15 for details. To return to the home screen, press the home button



8.14 PRECAUTIONS FOR DETECTION

Right way:

Select the angle with background reflection for measurement. Methane is light in density so scan above the area to be detected too. Scan the area in a “Z” shape, or scan the pipeline along an “S” shape route. After detecting an alarm, it can be scanned several times to be sure.

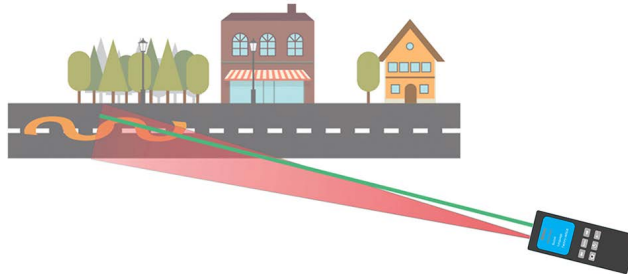

Avoid:


Scanning fast.
Areas such as wall corners that may form dual reflections.
Local occlusion areas with sudden changes in light intensity.
Strong reflective surfaces such as water, metal, glass, etc.
Strong electromagnetic or cross interference from similar equipment.

8.15 DATA QUERY


1. Download the software from CROWCON website [【https://www.crowcon.com/support/software-downloads/】](https://www.crowcon.com/support/software-downloads/)
2. Connect the device to your computer using Type-C data cable provided in the packing. The device must be switched on.
3. Extract the TdlasSerialV2 compressed file and double click **【TdlasSerial.exe】**

iconengines	2025/1/10 9:04
image	2025/1/10 9:04
imageformats	2025/1/10 9:04
platforms	2025/1/10 9:04
translations	2025/1/10 9:04
D3Dcompiler_47.dll	2014/3/11 18:54
exe.ico	2022/6/6 16:06
libEGL.dll	2019/4/8 18:17
libGLSV2.dll	2019/4/8 18:17
opengl32sw.dll	2016/6/14 20:00
Qt5Core.dll	2024/9/14 16:27
Qt5Gui.dll	2019/4/8 18:19
Qt5SerialPort.dll	2019/4/9 17:11
Qt5Svg.dll	2019/4/9 17:05
Qt5Widgets.dll	2019/4/8 18:21
readme.png	2024/10/9 14:00
readme2.png	2024/10/9 14:02
TdlasSerial.exe	2025/1/3 13:41
TdlasSerial.pdb	2025/1/2 11:04


4. The program will then open, there would be indicate “device not found ” if you didn’t connect the device through the cable.
Then the display would open as bellow, when you connect the device the COM port would automatically recognise.

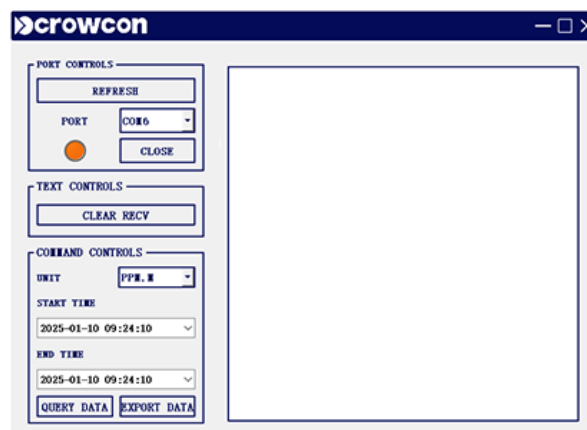

5. If the indicate light does not turn orange, check the Type-C connection cable and click Refresh for automatic connection or click Open for manual connection.

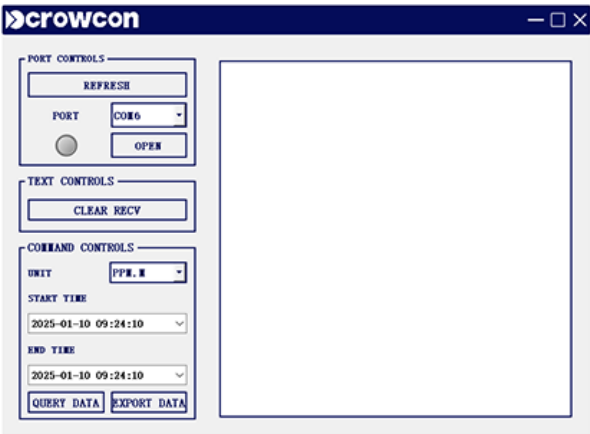

6. Select the unit you prefer to export, click Start Time and End Time to select, then click Query Data to query. The data for the selected time period will be displayed in the blank space on the right. Click CLEAR RECV to clear the data displayed in the blank space on the right.

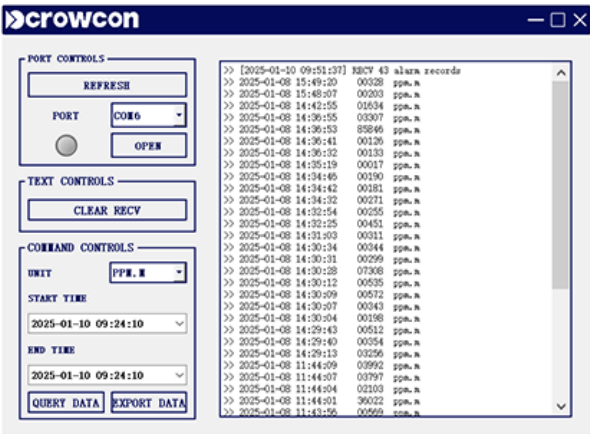

7. Click Export to export data, select the path, and you can export the data for the selected time period. The exported data can be opened in Excel, and an example of the opened data is shown below.

	A	B
1	DateTime	ppm.m
2	2025-01-08 15:49:20	328
3	2025-01-08 15:48:07	203
4	2025-01-08 14:42:55	1634
5	2025-01-08 14:36:55	3307
6	2025-01-08 14:36:53	85846
7	2025-01-08 14:36:41	126
8	2025-01-08 14:36:32	133
9	2025-01-08 14:35:19	17
10	2025-01-08 14:34:46	190
11	2025-01-08 14:34:42	181

9. Charge

1. The instrument charging procedure is as follows:
2. Press and hold the power button to turn off the instrument.
3. Insert the Type-C plug into the device's power socket and connect to USB power source.
4. The screen shows "Recharging".
5. After being fully charged, the screen displays "Charged full".
6. Disconnect the power supply of the charger.

i When the instrument is turned on, the battery icon in the upper right corner of the screen displays the charging status and battery level. It is recommended to charge in the shutdown state to shorten the charging time.

10. Maintenance

In order to keep the instrument in good working condition, follow the instructions as follows:

- If necessary, clean the external surface of the instrument with a clean cloth.
- Clean the instrument screen with specialised screen cleaning cloth to prevent dust accumulation.
- Before each test, make sure that the instrument is working properly.
- Keep the instrument fully charged after each use.

11. Repair

Return to the factory for repair.

This instrument is a precision optical instrument and requires professional instrument debugging during repair. Do not attempt to repair the instrument by yourself.

During the warranty period, the repairs are free of charge. Repairs will be charged for outside of the warranty period.

12. Warranty

Warranty period

The warranty period of this product is one year as standard. Additional years are available when ordering.

Repair method: Return to the factory for repair. This instrument is a precision optical instrument and requires professional instrument debugging during maintenance.

Warranty coverage:

During the warranty period, the instrument will be repaired free of charge. Man-made damage, unauthorised disassembly and assembly of the instrument and other reasons will not be warranted, and relevant costs will be charged for.

The instruments produced by the company have undergone strict quality testing before leaving the factory. If there is a failure, please contact Crowcon immediately. Do not try to repair the instrument by yourself.

Once the instrument is disassembled and assembled manually, it is easy to damage the protective structure of the product and reduce the protection level which voids the warranty.

CONTACTS

UK HEAD OFFICE

172 Brook Drive, Milton Park, Abingdon,
Oxfordshire, OX14 4SD

+44 (0) 01235 557700

Crowcon Detection Instruments Ltd.

NORTH AMERICA OFFICE

5690 Eighteen Mile Road, Sterling Heights,
MI 48314, USA

+1 (859) 957 1039

Crowcon Detection Instruments Ltd. (USA Office)

CHINA OFFICE

Floor 3, Building 7, No.156, 4th Jinghai Rd, BDA,
Beijing, P.R. China. 101111

+86 (0)10 6787 0335

crowcon.com.cn

Crowcon Detection Instruments Limited Company
(China Office)

SINGAPORE OFFICE

Block 194 Pandan Loop, # 06-20 Pantech Business
Hub, Singapore, 128383

+65 6745 2936

Crowcon Detection Instruments Ltd. (Singapore
Office)

Disclaimer

Due to ongoing research and product improvement, specifications are subject to change without notice. While every effort has been made to ensure accuracy in this document, no responsibility can be accepted for errors or omissions. Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards, and guidelines. This document is not intended to form the basis of a contract.

For more information:

t: +44 (0) 1235 557700
e: info@crowcon.com
w: www.crowcon.com

Locate your Regional Sales Representative at:

www.crowcon.com/contact-us/where-to-buy

© 2025 Crowcon Detection Instruments Ltd.